

Guide to Regulators

Index

Section 1

page 4

Regulator Primer

Section 2

page 10

Matheson's Product Line

Section 3

page 16

Regulator Options and Accessories

Section 4

page 20

Using Your Regulator

Section 5

page 27

Performance Evaluation and Troubleshooting


Section 6

page 30

Glossary of Regulator Terms

Introduction


Choosing the right regulator for your application is critical – and often difficult. Product application, gas service, and required delivery pressure all influence regulator selection. At Matheson, we understand gases, and we understand the importance of using the appropriate equipment for each gas. Matheson's Guide to Regulators is a valuable tool that will help you pick the right product for your application, and get the most reliable results.

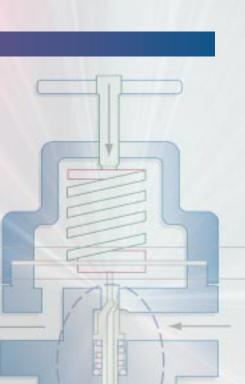

Section 1

Regulator Primer

How a Regulator Works

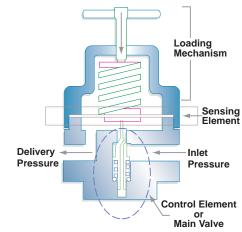

There are three basic operating components in most regulators: a loading mechanism, a sensing element, and a control element. These three components work together to accomplish pressure reduction.

The Loading Mechanism determines the setting of the regulator delivery pressure. Most regulators use a spring as the loading mechanism. When the regulator hand knob is turned, the spring is compressed. The force that is placed on the spring is communicated to the sensing element and the control element to achieve the outlet pressure.

The Sensing Element senses the force placed on the spring to set the delivery pressure. Most regulators use a diaphragm as the sensing element. The diaphragms may be constructed of elastomers or metal. The sensing element communicates this change in force to the control element.

The Control Element is a valve that actually accomplishes the reduction of inlet pressure to outlet pressure. When the regulator hand knob is turned, the spring (loading mechanism) is compressed. The spring displaces the diaphragm (sensing element). The diaphragm then pushes on the control element, causing it to move away from the regulator seat. The orifice becomes larger in order to provide the flow and pressure required.

Features Determine Function:


What makes a high purity regulator high purity?

High purity applications require equipment that will help maintain the purity of the system. High purity applications are sensitive to contamination from elements such as moisture, oxygen, and other gaseous vapors that may be present in ambient air. These contaminants enter the system when the regulator is removed from the cylinder during cylinder changeout, or they may enter through leaks or faulty seals.

The features of a regulator determine the type of service for which it can be used. A regulator intended for a high purity application has different features than a unit designed for general purpose use. Three main features determine the suitability of a regulator for high purity applications:

Body Type: Regulator bodies may be of forged or barstock construction. A forged body is formed by casting metal in a mold under pressure. A barstock body is made by machining out a solid piece of cold-drawn metal bar. Barstock bodies are used for high purity applications for the following reasons:

Barstock Construction

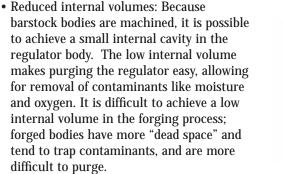



Forged Construction Note: the larger size of the forged body


- Tight grain structure of the metal: The cold drawing process produces metal barstock with a very tight grain structure. This tight grain structure prevents the regulator's internal surfaces from adsorbing moisture and contaminants, allowing them to be purged easily. The forging process produces a more porous grain structure; the internal surfaces of a forged body regulator tend to adsorb contaminants, which eventually find their way into the system.
- Low Ra surface finish: The machining process allows for very low Ra (roughness average) surface finishes on the barstock. The low Ra finish minimizes particle shedding, which contributes to contamination. It is difficult to achieve a low Ra finish in the forging process, making forged bodies susceptible to particle shedding and contamination.


Diaphragm Material: Diaphragms may be constructed of elastomers (neoprene, Viton, etc.) or stainless steel. Stainless steel diaphragms are used in high purity regulators because they do not adsorb and release (or "offgas") contaminants. When a regulator is removed from a cylinder, it is exposed to ambient air. An elastomeric diaphragm will adsorb moisture and any other contaminants from the air. When the regulator is put back into service, the elastomeric diaphragm **Regulator** releases these contaminants, which eventually find their way back into the system. A stainless steel diaphragm is unable to adsorb any contaminants, so it does not contribute to system contamination.

Type of Seals: The seal between the body of the regulator and the diaphragm is important in maintaining purity. A poor seal creates a leakage point through which contaminants may enter the system. A metal to metal seal (metal regulator body sealing to a metal diaphragm) is the most reliable, leak-free type of seal. An elastomeric diaphragm can degrade over time, compromising the integrity of this seal. Some regulator designs incorporate a stainless steel diaphragm that may be lined with an elastomer. Although the diaphragm is stainless steel, the seal is created between the regulator body and the elastomeric liner. It is not as reliable as a metal to metal seal.




A regulator designed for high purity applications is more costly than a regulator intended for general purpose use. Barstock bodies are more costly to produce than forged bodies due to the high amount of machining involved. Stainless steel is a more expensive diaphragm material than elastomers. It is important to remember that not all regulators are created equal when it comes to features.

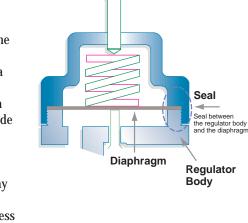

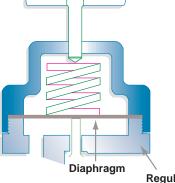

Body

Dual Stage Regulator

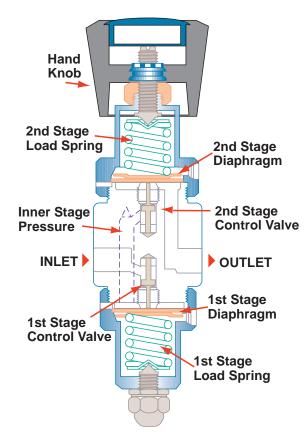

Dual Stage Regulators reduce the source pressure down to the desired delivery pressure in two steps. Each stage consists of a spring, diaphragm, and control valve. The first stage reduces the inlet pressure to about three times the maximum working pressure. The final pressure reduction occurs in the second stage.

The advantage of a dual stage regulator is its ability to deliver a constant pressure, even with a decrease in inlet pressure. For example, as a cylinder of gas is depleted, the cylinder pressure drops. Under these conditions, single stage regulators exhibit 'decaying inlet characteristic'; the delivery pressure increases as a result of a decrease in inlet pressure. In a dual stage regulator, the second stage compensates for this increase, providing a constant delivery pressure regardless of inlet pressure. The dual stage regulator is recommended for applications such as gas supply to analytical instruments, where constant delivery pressure is critical.

Single Stage Regulator

Single Stage Regulators accomplish the pressure reduction in a single step. Delivery pressure cannot be as tightly controlled as with a dual stage regulator. Single stage regulators should only be used where an operator can monitor and adjust pressure as needed, or where the regulator is supplied a nearly constant source pressure.

Line Regulators are single stage regulators that are used to provide point-of-use pressure monitoring and control. For example, a lab may have gas cylinders located in a room on the first floor. The gas may be piped up to instruments located in a lab on the second floor. In this case, it is difficult to monitor the gas pressure directly at the instruments, since the regulators are located on the cylinders on the first floor. A line regulator may be installed near the instruments for convenience of monitoring the delivery pressure at the point of use. These regulators are installed directly into gas lines, and have a single delivery pressure gauge.

Section 2

Matheson's Regulator Product Line

Matheson's regulator products are grouped into two families: Basic Regulator Products, and Specialty Regulator Products.



Model 3180 General Purpose Regulator



Model 3810 High Purity Stainless Steel Regulator



Model 9460 ULTRA-LINE® Regulator



Model 3230 High Purity Line Regulator

Basic Regulator Products

General Purpose Regulators

- Used with gases that are less than 99.995% pure
- Used for applications where cost (not purity) is the main concern
- Economy and deluxe models

High Purity Regulators

- Used with gases that are 99.995% pure or higher purity
- Used for applications where maintaining system purity is the main concern
- Brass, aluminum, and stainless steel options
- Standard regulators or Miniature regulators available

ULTRA-LINE[®] Ultra High Purity Regulators

- Used for applications where the highest possible purity is critical, such as semiconductor manufacturing
- Designed to minimize the risk of contamination

Basic Line Regulators

• Line regulators for general purpose, high purity, and ultra high purity applications

Specialty Regulator Products

The specialty regulators are intended for use with applications that require particular capabilities, such as low delivery pressures or high flow rates. There are general purpose and high purity options within the specialty regulator family.

- High Pressure Regulators: Delivery pressures up to 6,000 psig
- Corrosive Service Regulators: Used with acid forming halogens (HCl, HBr, etc.)
- High Flow Regulators: Flow rates up to 730 SCFH
- Low Pressure Regulators: Low positive pressure and absolute pressure
- Back Pressure Regulators: Prevent system overpressure
- Low Dead Volume Regulators: Low internal volume designed for high sensitivity applications
- Lecture Bottle Regulators: Corrosive and non-corrosive service units for use with small lecture bottles
- Specialty Line Regulators: Line regulators for high flow and low delivery pressure applications



Model 3210 Deluxe Corrosive Regulator



Model 3396 Absolute Pressure Regulator



Model 3590 Low Dead Volume Regulator



Model 6342A Back Pressure Regulator

Product Line at a Glance

Basic Regulators

Regulator Family	Model Series	Stages	Design Features
Economy	3180	1	Low cost forged bodies
General Purpose	3280	2	Economical neoprene diaphragms
Deluxe	1	1	• Low cost forged bodies & neoprene diaphragms
General Purpose	8	2	Rugged construction
	8-F	2	Large diaphragms provide good pressure control
	(with rotameter)		
High Purity Brass	3530	1	High Purity Features:
	3120	2	 Ni plated brass barstock bodies
			 316 stainless steel diaphragms
			Metal to metal seals
High Purity	3140	1	High Purity Features:
Aluminum			 Anodized aluminum barstock bodies
			 316 stainless steel diaphragms
			Metal to metal seals
High Purity	3510	1	High Purity Features:
Stainless Steel	3610	1	316 stainless steel bodies
	3810	2	 316 stainless steel diaphragms
			Metal to metal seals
			Tied seat (3610) for safety
High Purity	3550 Brass	1	High Purity Features:
Miniature	3560 AI	1	Brass, aluminum, or 316 stainless steel
	3570 SS	1	barstock bodies
	3850 Brass	2	 316 stainless steel diaphragms
	3860 AI	2	Metal to metal seals
	3870 SS	2	Compact size
ULTRA-LINE®	9300	1	Ultra High Purity Features:
Ultra High	9360	1	• 316L Stainless steel or Hastelloy® C-22 bodies
Purity	9370	1	Autogeneous butt-welded connections
-	9460	2	10-15 rms surface finish
	9470	2	Assembled in Class 100 clean room
Basic Line	3470	1	Cast zinc (3470), brass barstock (3420),
	General Purpose		316 stainless steel (3230), or 316L stainless steel
	3420	1	(9330) bodies
	High Purity Brass		Neoprene (3470) or stainless steel diaphragms
	3230	1	Tied seat (9330) for safety
	3230 High Purity SS		Tied seat (9330) for safety
	3230	1 1	Tied seat (9330) for safety

Applications	
Air supply to valves and actuatorsInert gas supply for purging	
 Calibration of pressure gauges, rotameters, and mass flow controllers Applications with high duty cycle/demanding operating conditions 	
 Supply of carrier gas/detector support gas for a variety of gas chromatography applications (see Regulator Selection Guide for GC Detectors on page 16) Supply of calibration standards to on-line process analyzers, emission monitoring systems, etc. 	
 Use with ammonia, sulfur containing compounds, amines, vinyl compounds, nitric oxide 	
 Supply of carrier gas/detector support gas for a variety of gas chromatography applications (see Regulator Selection Guide for GC Detectors on page 16) Supply of calibration standards to on-line process analyzers, emission monitoring systems, etc. 	
Applications requiring high purity gases and a compact regulator due t space limitations	to
All semiconductor industry gas applications	
 3470: Point-of-use regulation of inert gases 3420 & 3230: Point-of-use regulation of high purity gases used in chromatography or other analytical applications (see Regulator Selection Guide for GC Detectors on page 16) 9330: Semiconductor applications 	on

Product Line at a Glance

Specialty Regulators

Regulator Family	Model Series	Stages	Design Features
High Pressure	3020 Brass 3030 Brass 3040 Brass 3060 Brass 3060 SS	1 1 1 1 1	 Brass or stainless steel barstock bodies 316 stainless steel diaphragm (3020) or piston
Standard Corrosive Service	B15	1	Economical nickel plated forged brass
Deluxe Corrosive Service	3210	1	Monel construction for superior corrosion resistance
High Flow	3200	1	Brass or stainless steel barstock bodies 1/2" NPTF inlet and outlet ports
Low Pressure	8-2 General Purpose (0.06-2 psig) 3396 Absolute Pressure (-28"Hg VAC-15 psig)	2	 Economical forged brass (8-2) or high purity brass barstock (3396) construction Economical Viton[®] (8-2) or 316 stainless steel (3396) diaphragms
Back Pressure	6342A 6344A	1	 316L stainless steel bodies 316 stainless steel diaphragm (6342A) or 316 stainless steel piston (6344A) 6344A capable of delivering up to 700 psig
Low Dead Volume	3590 3590TO	1	 7 cc internal volume minimizes contamination and adsorption 316 stainless steel body and diaphragm
Lecture Bottle	3320 Non-Corrosive 3330 Corrosive Service	1	 Forged brass (3320) or PVC (3330) bodies Neoprene (3320) or Teflon® (3330) diaphragms 3320 equipped with CGA 170 for use with non-corrosives; 3330 equipped with CGA 180 for corrosive gases
Specialty Line	3540 (2-100 psig) 3491 (1 mm Hg VAC-1.8 psig) 3494 (-28" Hg VAC-15 psig) 3700 (2" WC-10 psig)	1 1) 1 1	 High purity stainless steel body and diaphragm Low cost brass body and butyl rubber diaphragm High purity stainless steel body and diaphragm Cast zinc body and natural rubber diaphragm; "pancake" design

_	Applications
	Applications requiring up to 6000 psig delivery pressure Manufacturing processes, charging of systems, purging
•	Use with acid forming halogen compounds (HBr, HCl, HF)
•	Applications requiring extended regulator life span in severe conditions
•	Applications requiring a high flow rate such as purging of large reactor or storage vessels
	 8-2: applications requiring a reduction of full cylinder pressure down to a low working pressure, such as fuel supply to burners or purging low pressure environmental chambers 3396: applications requiring subatmospheric pressure control
•	Used to relieve system overpressure, like a relief valve
	Use with mixtures containing trace quantities of reactive and/or adsorptive gases or vapors 3590TO specially cleaned for use with TO-14 calibration standards
	Use with lecture bottles. 3330 designed for use with low pressure applications (1-6 psig); if higher pressures are required, use 3570 Series Mini Regulators
	High purity, high flow applications (up to 730 SCFH)
	Non-corrosive, absolute pressure applications
•	Non-corrosive, absolute pressure applications Corrosive/high purity absolute pressure applications

Regulator Selection Guide for GC Detectors

Detector Type	Detection Leve	Regulator
Flame Ionization Detector (FID)	All Levels	
Thermal Conductivity Detector (TCD)	All Levels	Model 3530/3120
Nitrogen Phosphorus Detector (NPD)	All Levels	High Purity
Flame Photometric Detector (FPD)	All Levels	Brass Regulators,
Photoionization Detector (PID)	All Levels	Model 3420
Helium Ionization Detector (HID)	All Levels	High Purity Brass Line
Electrolytic Conductivity Detector (ELCD or Hall Detector)	Levels >50 ppm	Regulators
Electron Capture Detector (ECD)	Levels > 50 ppm	
Electrolytic Conductivity Detector (ELCD or Hall Detector)	Levels < 50 ppm	Model 3510/3810 High Purity Stainless Steel
Electron Capture Detector (ECD)	Levels < 50 ppm	Regulators,
Mass Selective Detector or Mass Spec (MSD or MS)	All Levels	Model 3230 High Purity Stainless Steel Line Regulators
Atomic Emission Detector (AED)	All Levels	Stamess Steer Line Regulators

Section 3

Options and Accessories

Helium Leak Testing

A helium leak test is used to determine the leak rate across the diaphragm or fittings on the regulator. The leak rate value should be as low as possible to prevent contamination by ambient air or escape of hazardous gases.

A complete helium leak test involves monitoring the inboard leakage and the outboard leakage of a regulator. This testing is available for a fee. Inboard leak testing involves drawing an internal vacuum on the regulator, and surrounding it with helium. The helium leak rate from the outside of the regulator to the inside of the regulator is then monitored. Outboard leak testing is performed by pressurizing the regulator with helium and analyzing the surrounding space for the presence of helium. Upon completion of the tests, a certificate is written and forwarded with the item to the customer.

Flash Arrestors

Flash arrestors are safety devices that shut off the gas flow if a flashback occurs in a system. A flashback is the combustion of a flammable mixture within the tubing or piping of a gas transfer system. If the flashback travels back through the piping and reaches the regulator, the regulator becomes a small bomb. If it reaches the gas cylinder, the cylinder becomes a large bomb.



Model 6104 Flash Arrestor

As the flashback occurs, it is preceded by a shock wave. The flash arrestor senses the shock wave and closes a valve that shuts off the gas flow. The flame is detoured through three feet of spiral tubing in the flash arrestor, where it is extinguished. The flash arrestor also incorporates a reverse flow blocking mechanism that effectively prevents accidental mixing of gases in the regulator. Flash arrestors are available in brass (Model 6103) and stainless steel (Model 6104), and may be reset and reused up to three times after a flashback has occurred.

Purge Assemblies

A purge assembly is recommended for use with toxic, corrosive, or flammable gases. The assemblies are available in a cross purge configuration (Models 4774 and 4775) and a tee purge configuration (Models 4753-4756). The tee purge and the cross purge help to ensure safety when working with hazardous gases. The cross purge also protects the system from atmospheric contamination. The tee purge is used for general purpose corrosive applications; the cross purge is used for high purity applications where preventing contamination is critical.



Model 4774 Cross Purge Assembly

Safety: When a regulator is removed from a cylinder of toxic or flammable gas, some gas is released into the work atmosphere. Some materials (such as silane) will spontaneously ignite when exposed to air. A purge assembly is used with an inert gas to flush all hazardous gases from the regulator, eliminating their release when the regulator is removed from the cylinder. Corrosive gases like hydrogen chloride present severe corrosion problems when they are exposed to moisture. The cross purge's valving configuration allows the regulator to be closed off completely from the atmosphere before removing it from the cylinder. Closing the valves prevents atmospheric moisture from contacting the gas, minimizing corrosion.

Purity: Atmospheric contaminants like moisture and oxygen cannot be tolerated in a high purity system. When a regulator is removed from a cylinder, atmospheric oxygen and moisture enter the regulator. When the regulator is put back into service, these contaminants enter the system. As mentioned above, the cross purge's valving configuration allows the regulator to be completely isolated from the atmosphere, preventing contaminants from entering the system.

Single Station Manifolds


A single station manifold is used to mount a regulator to a wall. These units consist of a stainless steel bracket and a stainless steel flex hose with a CGA connection and integral check valve. Wall mounting the regulator eliminates the need to handle the regulator during cylinder changeout, minimizing the risk of it being improperly reinstalled. The check valve in the CGA connection prevents the release of gas when the cylinder is changed, and prevents ambient air from entering the system. The Model 5330 has brass end connections, and the Model 5430 has stainless steel end connections.

Excess Flow Valves

The excess flow valve (Model 6290 Series) is designed to shut down the gas supply in case of abnormal flow conditions caused by rupture, fire, or malfunctioning valves. The valve will automatically detect excess flow when the event occurs and will shut down the supply flow immediately so that the remaining contents of the cylinder(s) does not empty into the work or storage area. This feature is critical with toxic, poisonous, or flammable gases, but can also be important when dealing with inert gases in small, poorly ventilated areas where asphyxiation is a potential hazard.



Model 6290 Excess Flow Valve

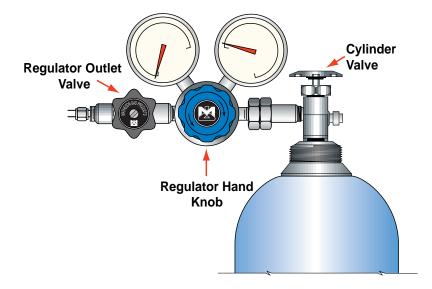

Section 4 - Using Your Regulator

Installing the Regulator

Regulators are equipped with CGA (Compressed Gas Association) fittings for connection to cylinders. Each CGA connection has a numerical designation, and a listing of gases with which it may be used. The CGA prevents a regulator from being used on incompatible gases. For example, the CGA connection designated for use with oxygen (CGA 540) cannot be used on a cylinder of hydrogen. The table on page 24 lists common gases and their corresponding CGA connections.

Connecting the Regulator to the Cylinder and Setting the Delivery Pressure

- 1. Close the regulator by rotating the hand knob in a counterclockwise direction.
- 2. Close the regulator outlet valve by rotating the valve knob in a clockwise direction.
- 3. Connect the regulator to the cylinder. The regulator should be attached to the cylinder without forcing the threads. If the inlet of the regulator does not fit the cylinder outlet, it is likely that the regulator is not intended for the gas service.

- 4. Slowly open the gas cylinder valve. Check the inlet pressure gauge to ensure that it registers the expected value. Low cylinder pressure may indicate a leaking valve, which can be a serious safety issue.
- 5. Check all high-pressure connections for leaks using an approved soap solution or leak detection device.
- 6. Open the cylinder valve completely.
- 7. Adjust the regulator hand knob to raise the delivery pressure to the desired value. Do not exceed the maximum delivery pressure indicated by the model number label on the regulator.
- 8. Open the outlet valve on the regulator to establish gas flow to the system. This valve is used to control the gas flow. The regulator itself should not be used as a flow controller by adjusting the pressure to obtain different flow rates. This practice defeats the purpose of the pressure regulator, and may result in a pressure setting that is in excess of the design pressure of the system.
- 9. After flow is established, the set delivery pressure may decrease slightly. Check to see that the delivery pressure is as desired and make any necessary adjustments.


Removing the Regulator from the Cylinder

For temporary shutdown (less than 30-minute duration), simply close the regulator outlet valve.

For extended shutdown (beyond 30-minute duration) follow these steps:

- 1. Shut off the gas cylinder valve completely.
- 2. Shut down any additional gas supplies that may be supplying gas to the system.
- 3. Open the regulator and the outlet valve to drain the contents of the regulator through the system in use. Both regulator gauges should descend to zero.
- 4. When using a toxic or other hazardous gas, purge the regulator and system with an inert gas (see instructions on Purging the Regulator, on page 23).

- 5. Close the regulator by rotating the knob counterclockwise. Close the outlet valve by rotating it clockwise.
- 6. Disconnect the regulator from the system or downstream equipment.
- 7. Disassemble the regulator from the cylinder by slowly loosening the cylinder connection. Listen for gas seepage. If leakage is evident, re-tighten the cylinder connection immediately, and check the cylinder valve for proper closure. If leakage occurs when the cylinder valve is closed, and the regulator has been drained of all gases, contact the gas supplier immediately.
- 8. Replace the plug into the cylinder valve outlet (where applicable). Replace the cap on the cylinder over the valve. Remove the cylinder from the work place and put the cylinder into a safe storage area. Replace the empty cylinder with a new one and re-install the regulator.

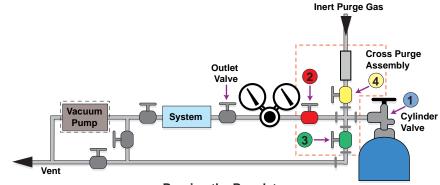



Purging the Regulator Using a Cross Purge Assembly

- 1. Close cylinder valve 1 and valve 2.
- 2. Open valves 3 and 4 allowing the inert purge gas to flush the Cross Purge Assembly.
- 3. Alternately close and open valve 3 a few times to dilute any gas trapped in the Cross Purge Assembly by pressurizing and venting.
- 4. Close valve 3. Close valve 4 until barely open. This will ensure a continuous small flow of inert purge gas during the time the inlet connection is open to the atmosphere.
- 5. Disconnect the regulator from the empty cylinder and reconnect it to the replacement cylinder.
- 6. Close valve 4.
- 7. Open valve 3. Evacuate the assembly, if possible, then reclose valve 3. If this is not possible, steps 2 and 3 should be repeated.
- 8. Open the cylinder valve 1 long enough to fill the Cross Purge Assembly with cylinder gas, and then re-close.
- 9. Repeat steps 7 and 8 once more if evacuation facilities are available; four more times if venting to atmosphere. At 225 psig cylinder pressure, this practice will dilute the purge gas to below 1 ppm.
- Check to ensure that valves 3 and 4 are securely closed; the valve handles should be horizontal. Valve 2 may be opened. The handle will indicate the direction of the flow.

Compressed Gas Association Valve Outlet Listing

	CGA Valve Outlet
Gas	& Conn. No.
Acetylene	510
Air, Breathing	346
Air, Industrial	590*
Allene	510**
Ammonia, Anhydrous	705**
Ammonia, Electronic	660/720
Argon	580*/718
Argon-3500 psig	680***
Argon-6000 psig	677
Arsine	350/632
Boron Trichloride	660**/634
Boron Trifluoride	330**/642
1,3-Butadiene	510*
Butane	510*
Butenes	510*
Carbon Dioxide	320*/716
Carbon Monoxide	350*/724
Carbonyl Fluoride	660
Carbonyl Sulfide	330**
Chlorine	660**
Cyanogen	660
Cyanogen Chloride	660
Cyclopropane	510*
Deuterium	350*
Dichlorosilane	678/636
Dimethylamine	705**
Dimethyl Ether	510*
2,2-Dimethylpropane	510
Ethane	350*
Ethyl Chloride	300*
Ethylene	350*
Ethylene Oxide	510**

CGA Outlet Listing (continued)

	CGA Valve Outlet
Gas	& Conn. No.
Fluorine	679
Germane	350/632
Halocarbon 12 (Dichlorodifluoromethane)	660*/716
Halocarbon 13 (Chlorotrifluoromethane)	660/716
Halocarbon 13B1 (Bromotrifluoromethane)	660
Halocarbon 14 (Tetrafluoromethane)	320*/716
Halocarbon 22 (Chlorodifluoromethane)	660*
Halocarbon 23 (Fluoroform)	660/716
Halocarbon 114 (2,2-Dichlorotetrafluoroethane)	660*
Halocarbon 115 (Chloropentafluoroethane)	660*
Halocarbon 116 (Hexafluoroethane)	660
Halocarbon 142B (Chloro-1,1-Difluoroethane)	510
Halocarbon 1113 (Chlorotrifluoroethylene)	510
Helium-3500 psig	680***
Helium	580*/718
Hexafluoropropylene	660*
Hydrogen	350*/724
Hydrogen-3500 psig	695***
Hydrogen Bromide	330**/634
Hydrogen Chloride	330**/634
Hydrogen Fluoride	660**/638
Hydrogen lodide	330**
Hydrogen Selenide	350
Hydrogen Sulfide	330**/722
Isobutane	510*
Isobutylene	510*
Krypton	580/718
"Manufactured Gas B"	350
Methane	350*
Methyl Bromide	330
3 Methyl-1-Butene	510
Methyl Chloride	660*

CGA Outlet Listing (continued)

	CGA Valve Outlet
Gas	& Conn. No.
Methyl Fluoride	350
Methyl Mercaptan	330**
Monomethylamine	705**
Neon	580*/718
Nitric Oxide	660/712
Nitrogen	580*/718
Nitrogen-3500 psig	680***
Nitrogen-6000 psig	677
Nitrogen Dioxide	660
Nitrogen Trioxide	660
Nitrous Oxide	326*
Octofluorocyclobutane	660*
Oxygen	540*/714
Oxygen Mixtures Over 23%	296
Perfluoropropane	660*/716
Phosgene	660
Phosphine	350/632
Phosphorus Pentafluoride	660**
Propane	510*
Propylene	510*
Silane (High Pressure)	350/632
Silicone Tetrafluoride	330**/642
Sulfur Dioxide	660**
Sulfur Hexafluoride	590*/716
Sulfur Tetrafluoride	330**
Trimethylamine	705**
Vinyl Bromide	510
Vinyl Methyl Ether	510
Xenon	580**/718

*Lecture bottles use CGA No. 170

**Lecture bottles use CGA No. 180

***For information on CGA 680 and 695 connections contact your nearest Matheson office.


Section 5 -

Performance Evaluation

and Trouble Shooting

Several things are evaluated to determine a regulator's performance.

- Pressure regulation as a function of flow: All regulators experience some delivery pressure drop with increased flow rate. The smaller the drop as flow is increased, the better the performance.
- Pressure regulation as a function of inlet pressure. As a cylinder's contents are depleted and the inlet pressure drops, the regulator delivery pressure may either rise or fall depending on the regulator design. In both cases, this is known as regulator "droop." Two stage regulators generally provide better regulation under these circumstances.
- "Lockup" of a regulator. Lockup is the difference in pressure between a flowing and a non-flowing condition. If a regulator has its delivery pressure set while gas is flowing, and flow is suddenly stopped, a small rise in delivery pressure (lockup) will occur before the regulator's valve closes fully. The lower the lockup, the better the performance.
- Seat leakage of the regulator. Seat leakage is the tendency of gas to leak across the regulator seat, when the regulator outlet valve knob is fully closed (turned counterclockwise) and a high pressure source exists on the inlet side. A low leakage value is preferred.
- Leakage rate across the diaphragm or fittings on the regulator. This leakage value is normally measured using helium gas and a mass spectrometer or other type of helium leak detector. Regulators for specialty gas service may have published values of typical leakage rates either inboard (from the atmosphere into the regulator) or outboard (from the inside of the regulator to the atmosphere). For safety, it is important that this leak rate value be as low as possible in order to prevent possible contamination by ambient air and moisture or escape of hazardous gases.

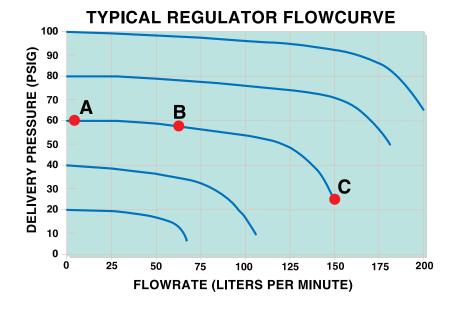

Reading Flow Curves

The flow properties of a regulator are illustrated by the flow curve. The vertical axis indicates the delivery pressure at which the regulator is set, and the horizontal axis indicates the gas flow that the regulator passes. The curves are made by setting the delivery pressure while there is no gas flow, and then slowly opening the outlet valve downstream while measuring both the flow and the delivery pressure. Typically, as flow increases, delivery pressure drops. The portion of the curve to the far left is flat; in this range, the regulator demonstrates a stable pressure regulation although the flow is changing. For example, increasing the flow from point "A" to point "B" results in a slight decrease in pressure. The portion of the curve to the right shows a rapid drop in pressure with increasing flow rate, indicating that the regulator valve seat is almost wide open. If flow is increased from point "B" to point "C", there is a large drop in pressure that is typical for all regulators.

Regulator Troubleshooting

There are a number of indications of regulator malfunction. This guide lists some of the potential problems that may be experienced.

Problem	Cause	Action
Gauges do not read zero when gas is drained from the regulator	Faulty gauges	Replace gauges
Gas coming out of the outlet when the regulator is in the closed position.	Seat failure or imminent seat failure	Replace seat; recondition regulator
 Delivery pressure rising with the following conditions: a) cylinder valve open, b) regulator set at a given delivery pressure, and c) outlet valve closed for five to ten minutes 	Seat failure or imminent seat failure	Replace seat; recondition regulator
Gas leakage from hand knob area	Deficient diaphragm or diaphragm seal	Replace diaphragm or seal; recondition regulator

If any of the above problems are experienced, please return the regulator to Matheson for repair.


Glossary of Regulator Terms

The following terms may be encountered when dealing with regulators.

	The following terms may be cheour	tered when dealing with regulators.			
	Burst Pressure –	A design test pressure which determines the ultimate structural strength of a regulator or valve. Permanent deformation and	Inlet Pressure (P1) –	The pressure of the gas at the supply connection of a regulator or valve. Typical units of measure are psig, bar, or pascal.	
	Captured Venting –	leakage are permitted, but parts must remain assembled (no sudden ruptures).	Leakage, Inboard –	Leakage through an external joint or seal where the direction of flow is from the	
		A feature incorporated in a self-venting pressure reducing regulator which provides an additional port to permit the piping away		outside into the regulator or valve. The leakage rate is measured in atm cc/sec He(lium).	
		of the expelled gas from the regulator's vent valve.	Leakage, Outboard –	Leakage through an external joint or seal where the direction of flow is from the	
	Control Element –	One of the three basic elements of a pressure regulator. It acts to reduce a high inlet pressure to a lower working or delivery pressure. The control element is sometimes		inside of the regulator or valve to the outside. The leakage rate is measured in atm cc/sec He(lium), and the pressure inside the regulator should be stated.	
		called a main valve, valve stem, or poppet.	Load Element –	One of the three basic elements of a pressure reducing regulator (usually a	
	Cv – Decaying Inlet Characteristic –	See "Flow Capacity" The effect of the set pressure of a regulator		spring). It provides the means by which the	
	Decaying inter characteristic -	as a result of an inlet pressure change;		operator can set the force that determines the outlet pressure of the regulator.	
		normally an increase in outlet pressure due to a decrease in inlet pressure.	Lock-up –	The outlet pressure increase that occurs above the "set pressure" as the flow is	
	Diaphragm –	A type of sensing element used in a regulator. Common diaphragm materials are Buna-N, Viton, Ethylene Propylene, 316 Stainless Steel, and Elgiloy.		decreased to zero.	
			Outlet Pressure (P2) –	The pressure of the gas from the discharge connection of a regulator or valve.	
	Droop –	The outlet pressure change (or offset) from the "set pressure" which occurs as flow rate increases.	Sensing Element –	One of the three basic elements of a pressure-reducing regulator, typically a diaphragm. It senses the changes in the	
	Flow Capacity (Cv) –	The maximum flow capability of a regulator or valve established at a specific set of conditions. The standard coefficient is the		outlet pressure, permitting the regulator to react in an attempt to return to the original "set pressure" by increasing or decreasing pressure.	
		term 'Cv', which is defined as the flow of one GPM of water at one PSI pressure drop. The term Cv for gaseous service is dependent on the ratio of inlet to outlet pressure and must be determined by the use	Set Pressure –	The desired operational outlet pressure for a regulator, normally stated at NO FLOW conditions.	
		of the appropriate formulae.	ULTRA-LINE is a registered trademark of Matheso Toflon and Viton are registered trademarks of F I		

ULTRA-LINE is a registered trademark of Matheson Gas Products Teflon and Viton are registered trademarks of E.I. Dupont Hastelloy is a registered trademark of Union Carbide

To place an order, or to obtain more information, please contact any of the following convenient customer service locations:

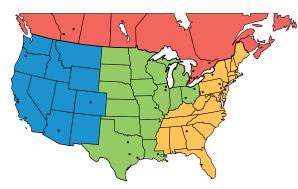

800-263-2620

403-471-3117

416-798-7079

905-668-6937

613-226-4228

ONTARIO (Sarnia)

321 Queen Street, Unit 6

TEL: 519-332-8100

ONTARIO (Toronto)

Direct to Whitby TEL: 416-798-7079

ONTARIO (Whitby)

613-226-4229

519-332-8102

905-668-6937

United States -

ARIZONA (Phoenix) TEL: 602-894-1387 FAX: 909-987-3494 CALIFORNIA (Northern) 6775 Central Avenue Newark 94560 TEL: 510-793-2559 FAX: 510-790-6241 CALIFORNIA (Southern) 8800 Utica Avenue Cucamonga 91730 TEL · 909-987-4611 FAX: 909-987-3494 COLORADO (Denver) 303-973-7714 TEL: FAX: 909-987-3494 **GEORGIA** (Atlanta) 6874 S. Main Street P.O. Box 136 Morrow 30260 TEL: 770-961-7891 FAX: 770-968-1268 ILLINOIS (Chicago) TEL 773-242-1321 FAX: 815-727-1676 ILLINOIS (Joliet) Manhattan Road & Richards Street PO Box 96 Joliet 60434 TEL: 815-727-4848 FAX: 815-727-1676 LOUISIANA (Baton Rouge Area) 1931 South Southland Avenue Gonzales 70737 TEL: 225-647-5303 FAX: 281-471-9518

MASSACHUSETTS (Gloucester)

61 Grove Street PO Box 1147 Gloucester 01930 TEL 978-283-7700

FAX: 978-283-6177 MISSOURI (St. Louis)

TEL: 314-645-5105 815-727-1676 FAX: NEW JERSEY (Northern)

932 Paterson Plank Road P.O. Box 85 East Rutherford, NJ 07073 TEL: 201-933-2400 FAX: 201-933-1928

Canada -NEW JERSEY ALBERTA (Calgary) (Southern) Direct to Edmonton 603 Heron Drive TFI · P.O. Box 38 FAX: 403-471-3117 Bridgeport 08014 ALBERTA (Edmonton) 609-467-2770 12143 68th Street FAX: 609-467-3415 T5B 1P9 NEW YORK (Buffalo) TEL: 403-471-4036 716-832-9286 FAX: 330-425-1791 ONTARIO (Mississauga) OHIO (Cleveland) 5512 Tomken Road, 1650 Enterprise Pkwy. Unit 14 L4W 4B8 Twinsburg 44087 330-425-4406 TEL: 330-425-1791 FAX: OHIO (Miamisburg) ONTARIO (Ottawa) 22B Jamie Avenue 937-236-3021

TEL:

TEL:

FAX:

TEL:

FAX:

TEL:

FAX:

FAX:

TEL:

FAX:

FAX.

TÉL:

FAX:

FAX:

FAX:

TEXAS (Austin)

TEXAS (Dallas)

10709 Tube Drive

TEL: 817-354-0319

TEXAS (Houston)

TEL: 281-471-2544

La Porte 77571

La Porte 77572

PO Box 969

Kyle 78640

Suite 110

Hurst 76053

2550 Dry Hole Drive

512-262-2129

512-262-4011

281-471-9518

281-471-9518

1920 West Fairmont Pkwy.

330-425-1791 **OREGON** (Portland) 13129 N.E. David Circle Portland 97230 TEL: 503-241-3321 510-790-6241 PENNSYLVANIA (Philadelphia Area) 609-467-2770 609-467-3415 PENNSYLVANIA (Pittsburgh Area) TEL: 412-261-2782 330-425-1791

Box 89 530 Watson Street, East L1N 5R9 905-668-3397 TEL: FAX: 905-668-6937

K2E 6T6

N7T 2S3

TEL:

FAX:

FAX:

FAX:

Gas Products

www.mathesongas.com

US Equipment Technology Center

166 Keystone Drive Montgomeryville, PA 18936 TEL: 215-641-2700

Canada **Technical Help**

800-263-2620 TEL:

International

UNITED STATES 932 Paterson Plank Road PO Box 85 East Rutherford, NJ 07073 TEL: 201-933-2400 201-933-1928 FA X ·

